


HOW TO CHECK THE VERSION OF YOUR DRIVER?

1) OPEN DEVICE MANAGER

(RIGHT MOUSE CLICK ON MY COMPUTER - PROPERTIES)


2) CLICK DEVICE MANAGER AND LOOK FOR „PROFILIC USB-TO-SERIAL....“

3)

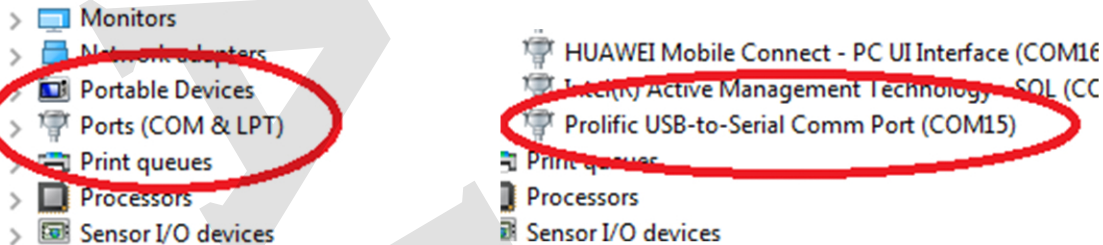

4) RIGHT MOUSE BUTTON ON PROFILIC.. CHOOSE PROPERTIES

5) DRIVER

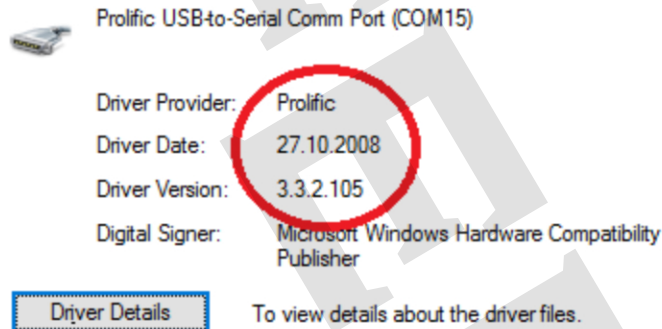

HERE YOU CAN SEE
YOUR CURRENTLY
INSTALLED DRIVER
VERSION

5.1) IF YOU NEED TO **UPGRADE/CHANGE** YOUR DRIVER VERSION, THEN YOU HAVE TO CONTINUE FROM 5) - CLICK UPDATE DRIVER

→ Browse my computer for driver software
Locate and install driver software manually.

→ Let me pick from a list of device drivers on my computer
This list will show installed driver software compatible with the device, and all driver software in the same category as the device.

Select the device driver you want to install for this hardware.

Select the manufacturer and model of your hardware device and then click Next. If you have a disk that contains the driver you want to install, click Have Disk.

